


How to sort measurements from the Noise Guide in the file explorer


Ver.03 06-03-2018 MLS

Follow these steps to sort your Noise Guide measurements for a better overview of both devices and measurements related to these devices.


1. Start out by doing exporting from the internal log of the Noise Guide via USB, then import them to the software. You can see how you import log files from the internal log in the Noise Guide manual

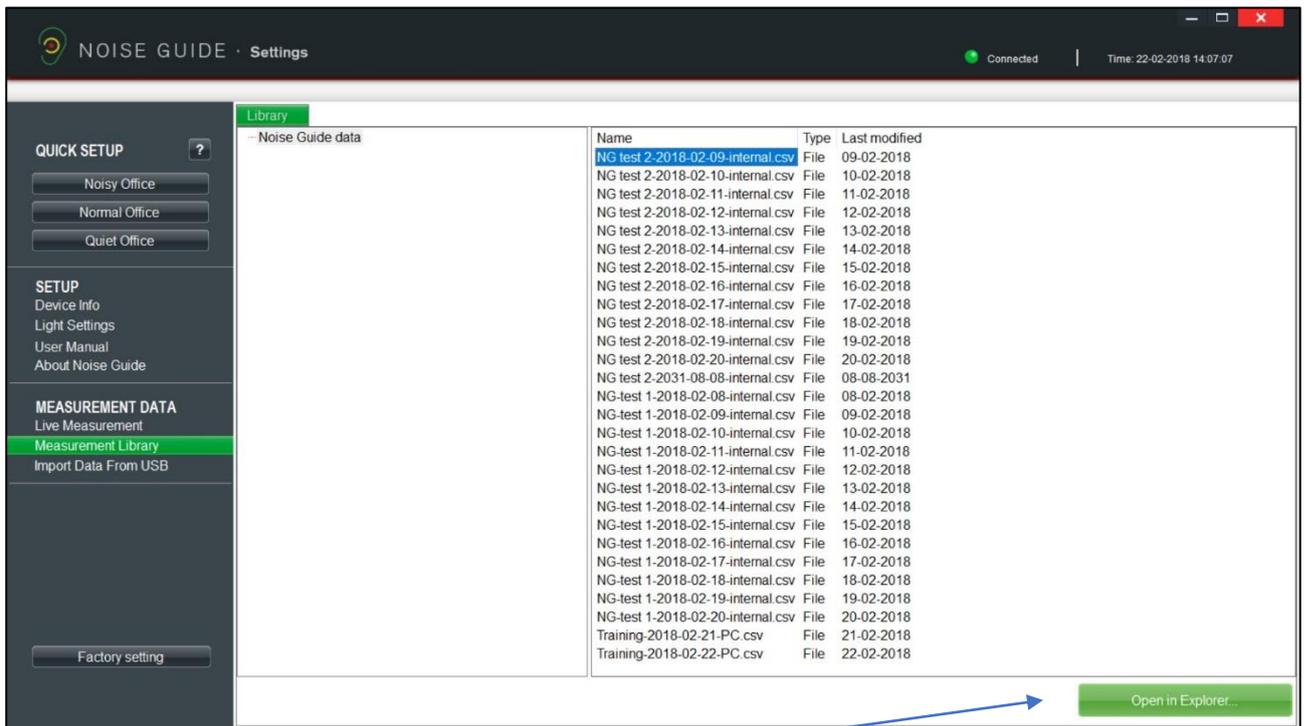


2. Click 'open in explorer in the bottom right corner

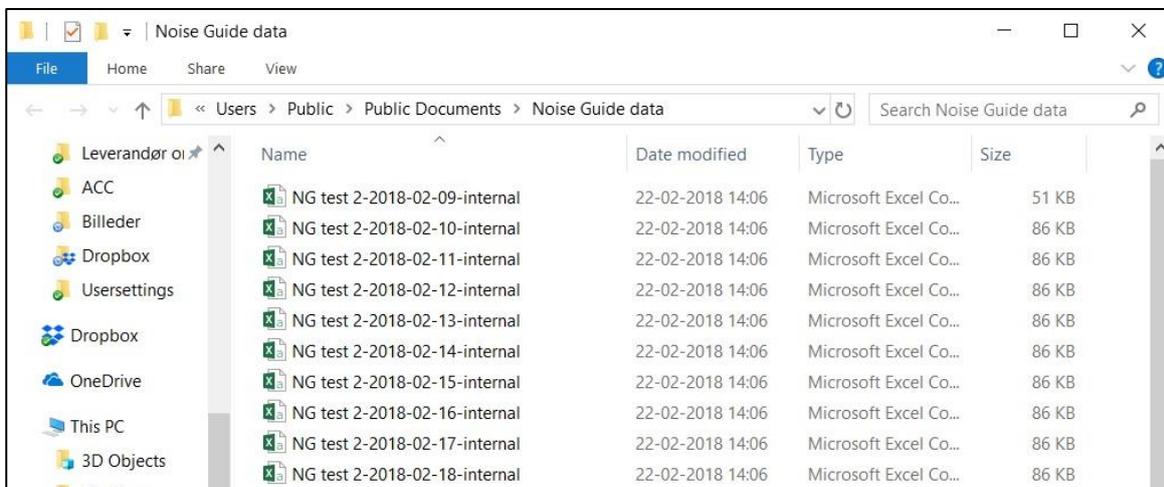


3. Right click and choose a new folder

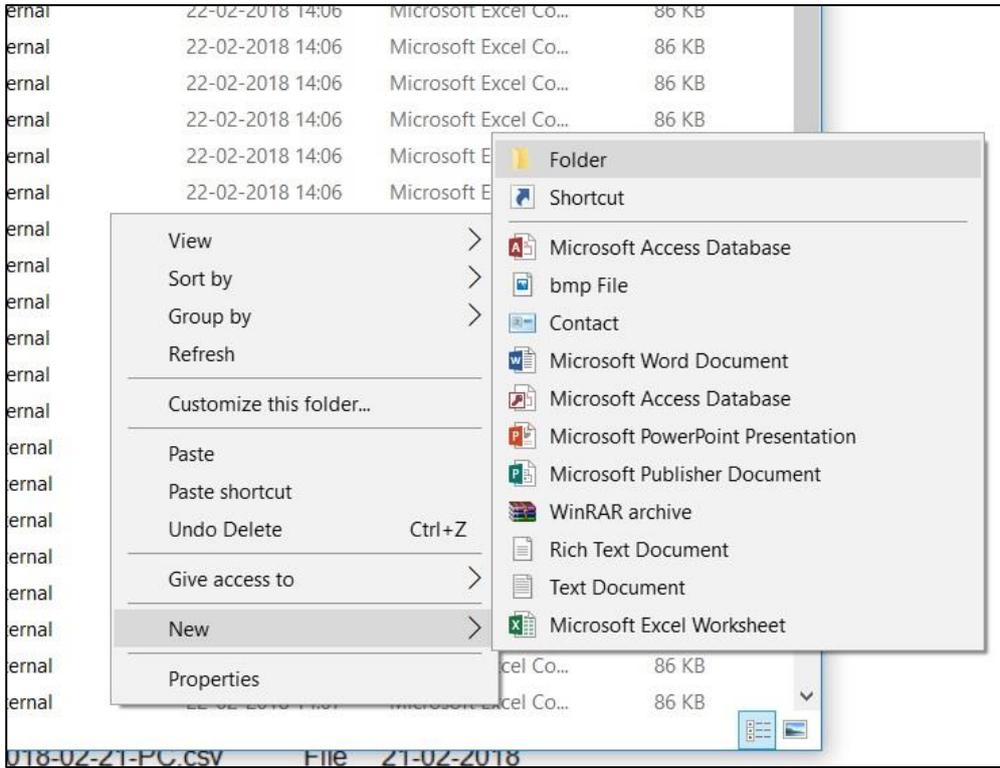

4. Name the folder after the Noise Guide device which contains these measurements

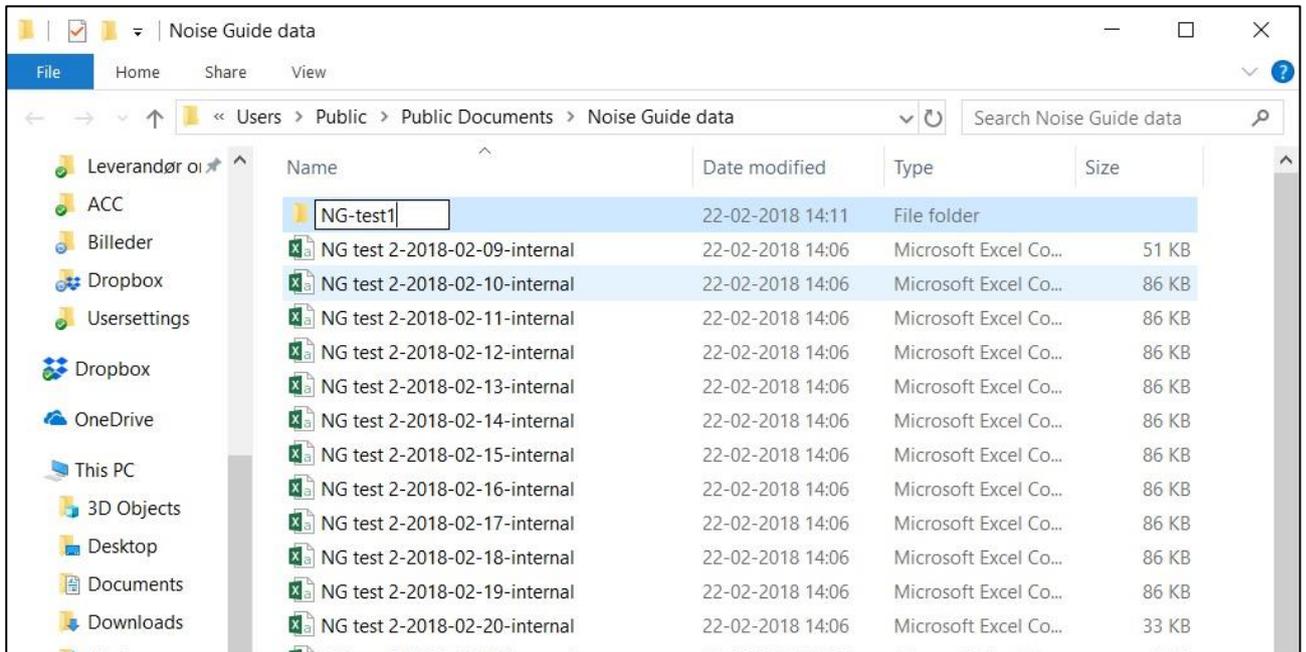


5. Select all measurements related to this Noise Guide device and drag them to the folder.

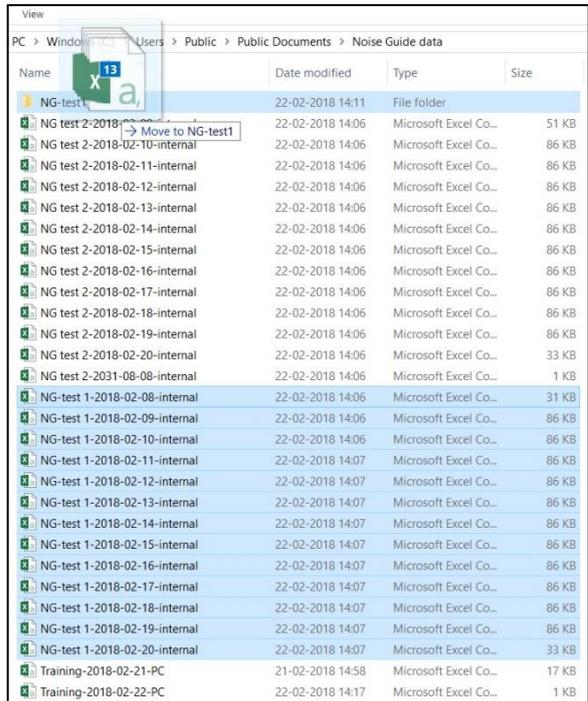

Name	Date modified	Type	Size
NG-test1	22-02-2018 14:11	File folder	
NG test 2-2018-02-09-internal	22-02-2018 14:06	Microsoft Excel Co...	51 KB
NG test 2-2018-02-10-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-11-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-12-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-13-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-14-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-15-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-16-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-17-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-18-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-19-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-20-internal	22-02-2018 14:06	Microsoft Excel Co...	33 KB
NG test 2-2031-08-08-internal	22-02-2018 14:06	Microsoft Excel Co...	1 KB
NG-test 1-2018-02-08-internal	22-02-2018 14:06	Microsoft Excel Co...	31 KB
NG-test 1-2018-02-09-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-10-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-11-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-12-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-13-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-14-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-15-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-16-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-17-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-18-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-19-internal	22-02-2018 14:07	Microsoft Excel Co...	86 KB
NG-test 1-2018-02-20-internal	22-02-2018 14:07	Microsoft Excel Co...	33 KB
Training-2018-02-21-PC	21-02-2018 14:58	Microsoft Excel Co...	17 KB
Training-2018-02-22-PC	22-02-2018 14:17	Microsoft Excel Co...	1 KB


Name	Date modified	Type	Size
NG-test1	22-02-2018 14:17	File folder	
NG test 2-2018-02-09-internal	22-02-2018 14:06	Microsoft Excel Co...	51 KB
NG test 2-2018-02-10-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-11-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-12-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-13-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-14-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-15-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-16-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-17-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-18-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-19-internal	22-02-2018 14:06	Microsoft Excel Co...	86 KB
NG test 2-2018-02-20-internal	22-02-2018 14:06	Microsoft Excel Co...	33 KB
NG test 2-2031-08-08-internal	22-02-2018 14:06	Microsoft Excel Co...	1 KB
Training-2018-02-21-PC	21-02-2018 14:58	Microsoft Excel Co...	17 KB
Training-2018-02-22-PC	22-02-2018 14:18	Microsoft Excel Co...	2 KB

6. Do the same with the measurements from the other Noise Guide devices

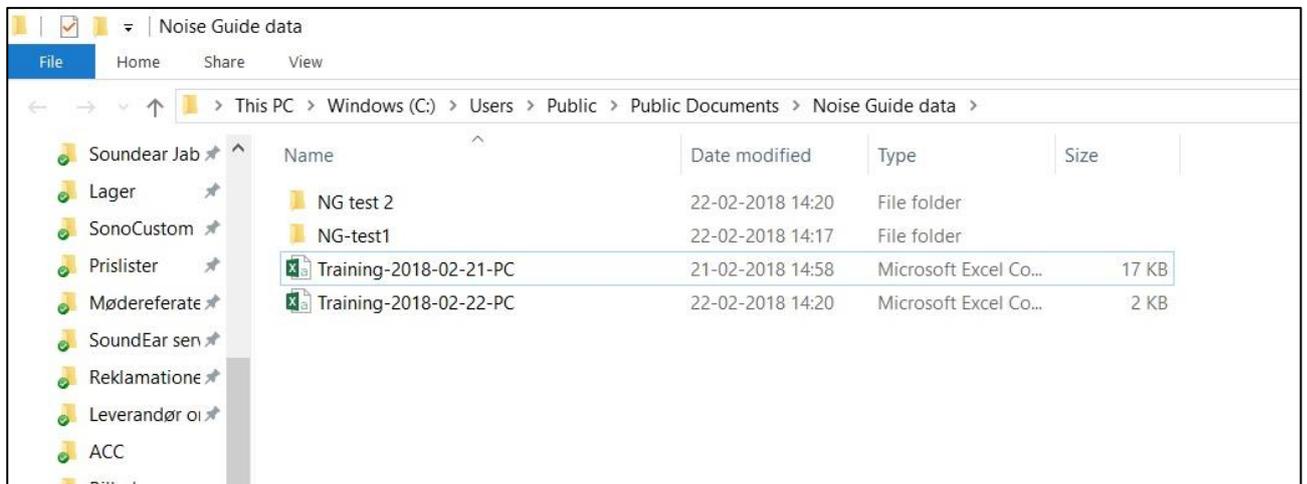


Name	Date modified	Type	Size
NG test 2	22-02-2018 14:20	File folder	
NG-test1	22-02-2018 14:17	File folder	
Training-2018-02-21-PC	21-02-2018 14:58	Microsoft Excel Co...	17 KB
Training-2018-02-22-PC	22-02-2018 14:20	Microsoft Excel Co...	2 KB

- Now go back to the measurement library for the Noise Guide software. As you can see below, it is much easier to get an overview over the log files

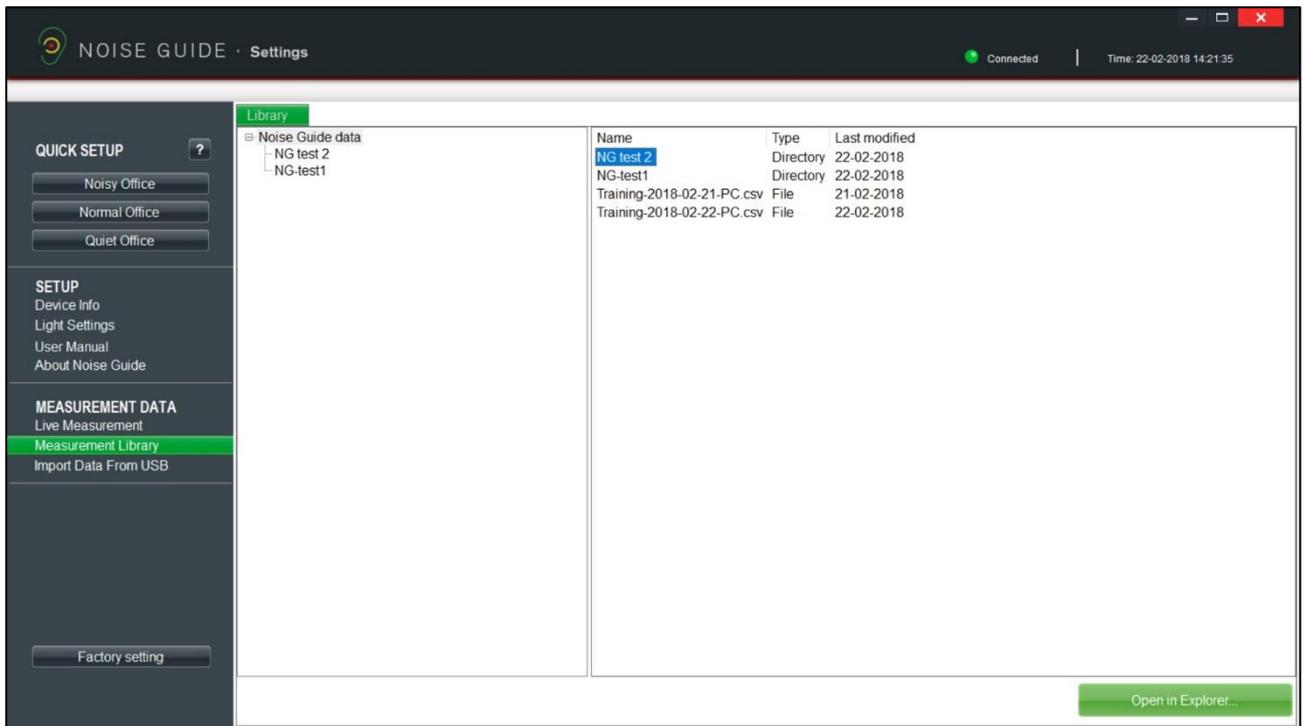

Name	Type	Last modified
NG test 2	Directory	22-02-2018
NG-test1	Directory	22-02-2018
Training-2018-02-21-PC.csv	File	21-02-2018
Training-2018-02-22-PC.csv	File	22-02-2018

- Click on the Noise Guide unit in the left column to see measurements for that device.

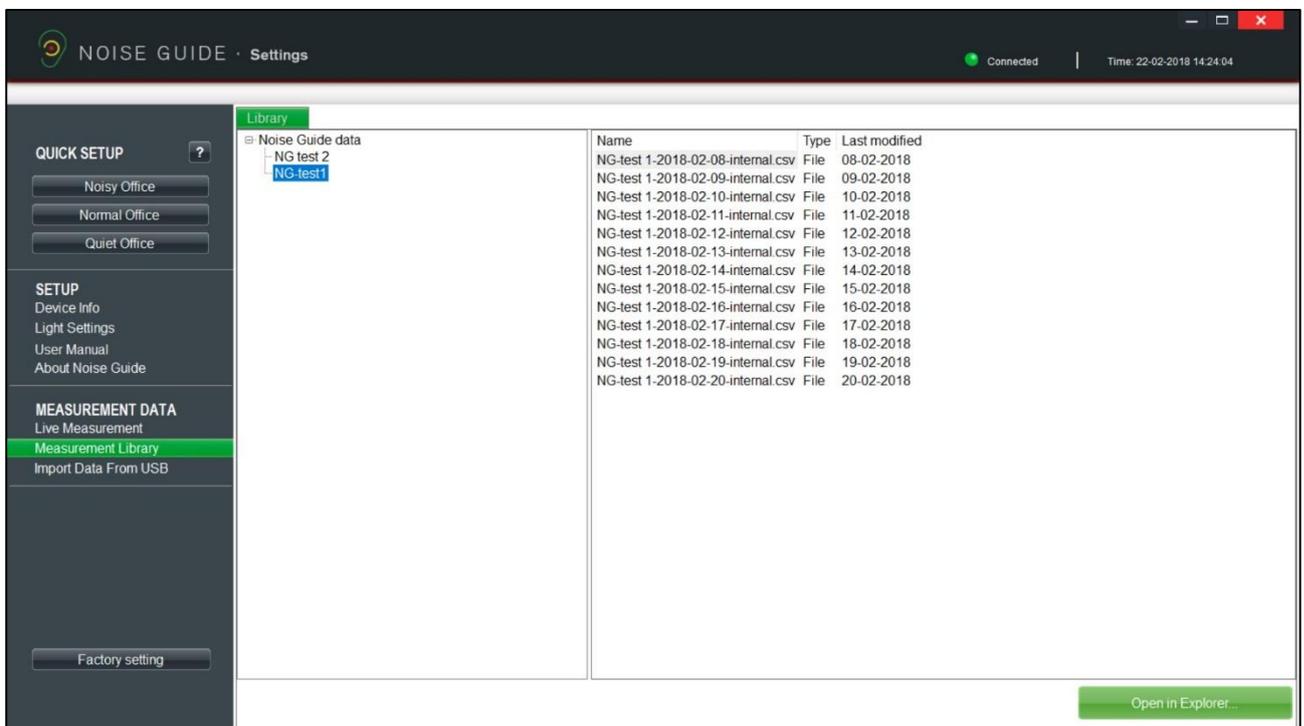

Name	Type	Last modified
NG-test 1-2018-02-08-internal.csv	File	08-02-2018
NG-test 1-2018-02-09-internal.csv	File	09-02-2018
NG-test 1-2018-02-10-internal.csv	File	10-02-2018
NG-test 1-2018-02-11-internal.csv	File	11-02-2018
NG-test 1-2018-02-12-internal.csv	File	12-02-2018
NG-test 1-2018-02-13-internal.csv	File	13-02-2018
NG-test 1-2018-02-14-internal.csv	File	14-02-2018
NG-test 1-2018-02-15-internal.csv	File	15-02-2018
NG-test 1-2018-02-16-internal.csv	File	16-02-2018
NG-test 1-2018-02-17-internal.csv	File	17-02-2018
NG-test 1-2018-02-18-internal.csv	File	18-02-2018
NG-test 1-2018-02-19-internal.csv	File	19-02-2018
NG-test 1-2018-02-20-internal.csv	File	20-02-2018